



promate.net Lifestyle Technology

WEE Robust Metallic Bluetooth® Speaker



Charging



On The Go



10 m Transmit



Built-in
Mic



Handsfree



Multi-Color

User Guide

Introduction

We believe that you should never have to compromise sound quality for portability. Introducing Wee, a wireless ultra-portable speaker. Even with its compact and portable size the speaker delivers a supreme base sound output and yet can easily clip onto your backpack. You can wirelessly stream audio from any Bluetooth® equipped mobile device or even play your favorite MP3/WAV tracks using the on board TF card reader. Wee can be used as a hands free device for answering calls too. All this encompassed in an abrasion resistant high quality aluminium housing. Wee, an ideal audio solution for indoor or outdoor music playback.

Packaging Contents:

- Wee
- USB charging cable
- AUX cable
- User Guide

Specification:

- Bluetooth® Version: 2.1+EDR
- Bluetooth® Profile: HFP, HSP, A2DP
- Input Power: 5V/500mA
- Output Power: 3W
- Impedance: 4 Ohms
- Speaker Frequency: 50Hz~18000Hz
- Signal-to-noise ratio: 65dB
- Charging time: 5 hours
- Maximum playing hours: 5-6 hours
- Battery Capacity: 800 mAh
- Operating Distance: 10 meters

Features:

 
- Lightweight high quality aluminium housing
- Slim speaker
- Abrasion resistant surface
- Durable and portable
- Answer phone calls wirelessly from any Bluetooth® smartphone
- Easy-to-use controls for music playback and answering phone calls
- Streams music wirelessly from any Bluetooth® enabled device
- Micro-SD / TF card play back support
- Available in a variety of colours

Precautions:

Please read all safety instructions and warnings thoroughly before using this product. Improper use of this product may result in damage to this or attached products.

- Do not disassemble the device or attempt to fix it.
- Kindly use the included USB Cable to charge the product.
- Do not attempt to replace any part of this case or battery inside.
- Do not crush, puncture or dispose of in fire.
- Do not store or use the battery in a high temperature environment, including intense sunlight or heat.
- Avoid excessive drops, bumps, abrasions and impacts.
- If there is any reason to believe that there is internal damage to the device, discontinue use immediately.
- If you find that the device is too hot, is emitting and odor is deformed, punctured or exhibits any suspicious or abnormal behavior, discontinue use immediately and contact our customer service.
- Always charge this product before extended storage.


Appearance & Interface Description:

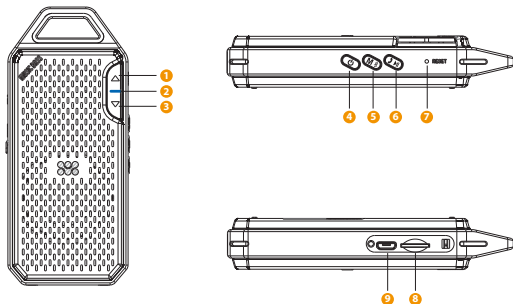

1. Volume + / Toggle Forward Button
2. LED Indicator
3. Volume - / Toggle Backward Button
4. Power Button
5. Mode Button
6. Play / Pause button
7. Reset Button
8. Micro-SD Card Slot
9. USB Charging Port

Operation Instructions:

 Charging Wee

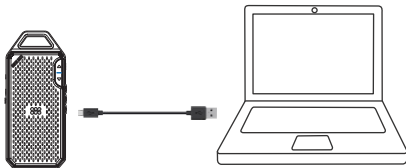


1. Connect Wee to a PC/Laptop/Mac or 5V USB adaptor (not included) with the USB cable included
2. Red LED turns ON during charging, turns OFF after the device is fully charged.
3. Red LED twinkles when the device has low power.

Paring Wee with mobiles (Bluetooth enabled) and Tablets




1. Press and hold the power button on Wee
2. A voice prompt “Bluetooth Enabled” indicates that Wee is now in Bluetooth® pairing mode.
3. Turn on the Bluetooth function on your phone and search for “Wee” in the available device list.
4. Pair the device to your phone using the passkey (0000).

 Playing Music via Micro-SD card

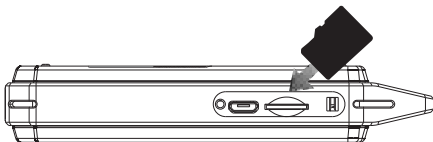

1. Turn on Wee and insert your Micro-SD card into the Micro-SD card slot as indicated above.
2. You will hear a voice prompt “SD Card Enabled” and the first track on the Micro-SD card begins playing automatically.

 Controlling Music Playback

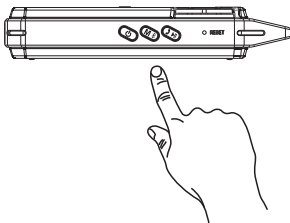

1. Use the Play/ Pause button to control music playback.
2. Skip to the previous track by short pressing the Toggle Backward button.
3. Skip to the next track by short pressing the Toggle Forward button.

Volume control

Control volume via the paired devices or by long pressing the Volume + / Volume - buttons on the device.

Answering Calls

1. Short press the “Play / Pause” button to answer the phone call.
2. Short press again to end a call.

Refusing Calls

1. During an incoming call press the Power button once to refuse the call.



www.promate.net